



5825 MIDDLEBROOK PIKE  
KNOXVILLE, TN 37921  
865.588.1131 AOPR.NET

## POPCORN MACHINE INSTRUCTIONS

---

### Electrical Requirements

Standard voltage for all models is 120-volt, 60 Hz, single-phase AC.

### Controls

There are three switches on the popper.

- Light and warmer switch: Turns on heat to bottom corn pan and light.
- Kettle motor switch: Turns on motor, which drives kettle agitator shaft.
- Kettle heat switch: Turns on heat element.

### Popping Instructions

1. Turn kettle heat and kettle motor switch "on."
2. Make test pop with 3 kernels of corn and 30 ml. of oil.
3. Load pre-measured popcorn and oil pouch into kettle.
4. When corn has finished popping, dump kettle out.
5. Repeat cycle, starting with #3. Always pop 3-5 batches for best popcorn.

### Amount of Popcorn & Oil

Your new popper is equipped with a 178-ml corn measure cup. Popcorn popped in coconut oil stays fresh longer. You may also use the premeasured packs of popcorn to pour into the kettle.

- Corn charge: 237 ml (8 ounces)
- Oil charge: 60 ml (2 ounces)
- Flavacol: 8 cc (1 tablespoon)

### Care & Cleaning

1. Each time you finish popping, wipe the outside of the kettle with a soft cloth to remove any oil drippings. **(Use caution! Kettle is extremely hot!)**
2. Do not let oil keep burning.
3. After you finish popping for the day, allow kettle to cool until it is not too hot to handle, but still warm.
4. Unplug kettle and remove it from the machine. With a cloth, wipe the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle.
5. Do **NOT** immerse any portion of the kettle or cabinet in water.
6. Cleaning the cabinet of the machine is simple. Use a clean cloth to wipe excess grease from glass, and wipe the outside of the machine.